



Canon imageRUNNER ADVANCE User Guide

Table of contents

Login screen	3
How to print	6
How to scan	8
How to copy	П
<u>Counters/Serial Numbers</u>	15
<u>Error Message</u>	20
Auto Gradation	25



Login Screen- for the first time



Place your card onto the car reader. The first time you will receive the message as shown

2

3

Enter the pin number you have been sent by email.

Select Register Card





Back to table of contents





Login Screen



(2)

Once you have registered your Pin the next time you go to the device you will see this screen .

Enter your Pin number and select Login.

C \equiv Energy Saver Print responsibly, help save the environment Home <u>e:</u> Enter your PIN Swipe to access **2** авс 1 3 DEF Swipe your card above the card reader PIN 5 4 6 2 Θ GHI JKL MNO 7 8 9 PQRS TUV WXYZ × 0 # 🥢 Reset С Stop $\langle \rangle$ \bigcirc Status Monitor ුව 123 Remaining 3 A3 paper is low. Back to table of contents







Home Screen

Once you've logged in, you will be presented with the home screen.

0

Select Copy to take you to the copy screen .

2

Select Scan to take you to the scan functionality .



Select Secure Print to access your documents that you have sent to print .

Home screen will always take you back to this screen .







1

How to Print



Select the "Secure Print" button.







How to Print



Select the print job, which will then be highlighted.

2

Select the print job, which will then be highlighted.







Once you have selected the scan icon on the home screen you will be shown the option to Scan to Myself.



Select the Scan to Myself icon









How to Scan



This feature is auto colour and B&W so the device will know to scan in colour or mono



- This is your scan resolution and can be changed to your needs
- (3)
- This is the type of document you are scanning



This shows how the document will duplex



This shows the page size of the output

This shows the number of scans required

6

Once all settings have been made press the Scan button to scan









How to Preview Scan



Press the scan button to see a preview of the scan.

en so	can	Secure Print	Scan				Menu	C Energy Saver	hamishfri T→ Log O	ell ut
	Multi-bias del la con- construcción del la construcción del la construcción de la constru	25 (89 5) 69 (9 ₂₁ , 105 10			Scan	*		Settings/ Registration	۰ ۱	ome
	5-160 (1944) (1975-56) (1971) (1975-1975) (1975-56) (1975-1975) (1975-56) (1975-57) (1975-56) (1975-57) (1975-56) (1975-57) (1975-56) (1975-57)	Conts ** 1244 12501 2011		•	Auto			1	2 ABC	3 DEF
	net rena ga	2011			300x300			4 бні	5 JKL	6 мпо
	N 100 Damp, March 1, N 100 Damp, March 1, N 100 Damp 1, N 100 Damp 1, N 100 Damp 1, Data 2 Damp 1,	11 11 14 14 16 16 16 19 19			Text/Image			7 PQRS	8 тиv	9 wxyz
	Data Con I Exist These Annue				Same Originals			*	0	#
					- 5		+	с	// R	eset
	1/1.0-0	oc			Automatic			Star	+	Stop
**			**		e Back	Next			>	
🔷 Stat	us Monitor 🛛 🔒 🔼 An	ı original has been	left on the plater	n glass.			ිට			123
,										







Select "Copy".

× 1

Home	🗊 Сору	Scan and Send	Fax/I-Fax Inbox		Menu	C Energy Saver	(3KA6CH0M2X9LB- 🗗 Log Out	
						Settings/ Registration	💼 Home	_ \
		•						
Сору		Scan		Secure Print				
	,							
			- /				Stop	
🚳 Status Monitor 🗟 🔟 Sys	tem Management	mode.			ුව		123	
i i								
(Ba	<u>ck to ta</u>	able of o	contents	





Device is pre set to Auto (Colour & B&W) so will automatically detect a colour or B&W document.

2

Copy ratio is set to 100% - select the copy ratio button for pre set enlargements & reductions e.g. A4-A3.

3 Paper so require

Paper source is set to Auto if you require a specific tray click on the Select Paper button.

参 Сору	Secure Print Scan	Menu	C Energy Saver	hamishfriell ₽ Log Out	
📀 Ready to copy.			Settings/ Registration	💼 Hom	e
02	3	Check Settings	1	2 АВС	3 Def
Auto (Color/B&W) 100	n ⊟ .] Au % A4	1	4 _{GHI}	5 JKL	6 мно
Select Color	y Select Paper	Previous Settings Favorite Settings	7 PQRS	8 TUV	9 wxyz
			*	0	#
Finishing 2-Si	ided Density	Text/Photo	С	🥢 Rese	t
			Sta	rt S	Stop
⊥ Interrupt		Options	<()	>	
Status Monitor 🔒 🔼 An	original has been left on the platen	glass. Öž			123

Back to table of contents







4

Device is pre set to Auto (Colour & B&W) so will automatically detect a colour or B&W document.

5

Copy ratio is set to 100% - select the copy ratio button for pre set enlargements & reductions e.g. A4-A3.

6

Paper source is set to Auto if you require a specific tray click on the Select Paper button.

🜍 Сору	Secure Print	Scan			Menu	C Energy Saver	hamishfri T+ Log O	ell ut
📀 Ready to copy.						Settings/ Registration	= +	ome
	1	1	Check Set	tings	4	1	2 АВС	3 Def
Auto (Color/B&W) 100	∎∎□ ▲ % A4	uto 5	1		•	4 _{GHI}	5 JKL	6 мно
Select Color	y Select Pape	:r •	Previous Settings	Favorite Settings	•	7 PQRS	8 тиv	9 wxyz
						*	0	#
Einishing 2-Si	ded	Density	Text/Photo		ard	С	🥢 R	eset
		Density				Star	t	Stop
⊥ √ Interrupt			Opt	ions	•	¢	>	
🔷 Status Monitor 🖻 🔼 An	original has been	left on the platen	glass.		9D			123
				<u>Back t</u>	o tabl	e of co	<u>ntents</u>	





Pages will run through the feeder on the top of the printer.



Select "Close" or "Log Out".

🜍 Сору	Secure Pi	rint 💽 Scan		Menu	C Energy Saver	(3BM7OF T→ Log C	7C27806- Out
Ready to ente	er settings. (Settings Changed)			Settings/ Registration	⊡ +	lome
	<copy> Scanning and printing</copy>				1	2 АВС	3 Def
Auto (Color/B&V	Full Color	100%	Auto		4 _{GHI}	5 JKL	6 мпо
Select Color	Pages Sh	eets Cop	ies	avorite Settings	7 PQRS	8 тиv	9 wxyz
	 Print Density 	3 ×	0/ 1		*	0	#
Collate + O				Dv ID Card	с	// R	leset
	Cancel		Close 🧳	by to cald	Sta	rt	Stop
	t		Optio	ns 🕨	¢	>	
Status Monite	or 🗟 🗊 Copy	Scanning		රා			123
				<u>Back to tab</u>	<u>le of cc</u>	ontents	





How to Get to the Counter/Serial Number.



Select the "123" button in the bottom right.

£	Home	🗊 Сору	Scan and Send	Fax/I-Fax Inbox		Menu	C Energy Saver	(3KA6CH0M2X9LB- IF+ Log Out	
							Settings/ Registration	💼 Home	_`,
		•							
	Сору		Scan		Secure Print				
		< —		>			Ø	Stop	
و چ	Status Monitor 🗟 🔟 Sys	tem Management	mode.			ුව			
					<u>Ba</u>	<u>ck to ta</u>	able of	contents	





How to Get to the Counter/Serial Number.

You'll then be able to see a list of all the "Serial Number".

Secure Print Scan	Menu	C Energy Saver	hamishfri ∏ + Log C	iell Out
<counter device="" information=""></counter>	IP Address: 192.168. 0.201	Settings/ Registration	⊞ +	lome
112 Total (Black & White/Large)	▶ 00000076	1	2 авс	3 DEF
102 Total 2101 Total 1	0001496900014531	4 _{GHI}	5 JKL	6 мно
 123 Total (Full Color + Single Color/Small) 501 Scan (Total 1) 	0000860400003885	7 PQRS	8 тиv	9 wxyz
113 Total (Black & White/Small)	▶ 00005489	*	0	#
		С	// R	leset
Service	Counter	Star	t	Stop
<serial 3be00702="" number:=""> iR-ADV C5740</serial>	OK 🗤	$\langle t \rangle$	>	
🔶 Status Monitor 🛛 🗟 🔼 An original has been left on the platen g	lass.			123
	Back to table	<u>e of co</u>	ntents	-





How to See the Toner Levels/Consumables



Select the "Status Monitor".

×

	Home	🗊 Сору	Scan and Send	Fax/I-Fax Inbox		Menu	C Energy Saver	(3KA6CH0M2X9LB- ➡ Log Out	
							Settings/ Registration	💼 Home	_ \
			•		•				
	Сору		Scan	2	Secure Print				
		/					_		
				_ /				Stop	
	Status Monitor 🛛 🖻 🔟 Sys	tem Management	mode.			ුව		123	
(Bac	k to ta	able of	contents	





How to See the Toner Levels/Consumables



Select the "Consumables/Others".

×

Status M	onitor	Secure Print	Scan				Menu	C Energy Saver	hamishfr T+ Log (iell Out
Copy/Print	Send	Red	ceive	Store		Consumables/ Others		Settings/ Registration		lome –
Job Sta	atus	Job Log			P	rint	-	1	2 АВС	3 Def
Time	Job Name	Use	r Name S	itatus	ŀ	App. Wait Time		4	5	6 MNO
								7	8	9
								PQRS	τυν	WXYZ
								*	U	#
								С	11	Reset
Interrupt/ Priority Print	Details ▶	Cancel						Sta	rt	Stop
						Close	لد	Û	>	Ø
Status Mon	itor 🗟 💷 Rei	mote Operation is	being used				ිට			123
(\ \						Bac	k to tab	<u>le of co</u>	ontent	<u>s</u>





How to See the Toner Levels/Consumables

You'll now be able to see the consumable levels.

Status Monitor	can	Menu	C Energy Saver	hamishfr ¶→ Log (iell Dut
Copy/Print Send Receive	Store C	onsumables/ hthers	Settings/ Registration		lome
Paper Size Name			1	2 АВС	3 Def
Image:	Se Se	6	4 _{GHI}	5 JKL	6 мно
Image: Second state Image: Second state Imag	Others	1.0/	7 PQRS	8 TUV	9 wxyz
	Black Toner	1 % 1/2 100 %	*	0	#
Details	Magenta Toner	90 % • 40 %	С	// F	Reset
	Check Consumables		Sta	rt	Stop
		Close	¢	>	
Status Monitor 🗟 🔼 An original has been left on	the platen glass.	- CD			123





ERROR:

Trying to print 9 page document in A5.

6	þ	Secure Print Secure Print	B	Scan			Menu	C Energy Saver	hamishfr ¶→ Log (iell Dut
S User	ECU	URE QUEUE nish_landallserviceslimited@ukaduniflow.onmicro	osoft.com			c) Ce o P	Settings/ Registration		lome
(_	Job	_	Format	Pages	Copies		1	2 АВС	3 DEF
		Microsoft Word - Document1	9	A4	1	1		4	5	6
		Microsoft Word - HANDOVER 2021 Copy	•	A5	9	1		7 PQRS	яс 8 тиv	9 wxyz
-								*	0	#
								с	1/ 1	Reset
		Print + Keep Print + Delete Del	lete	© Options	Selec	t all		Stai	rt >	Stop
¢	≽ St	tatus Monitor 🛛 🔒 🗳 Printer		1 A5	Load pap	er.	ලා			123
	,					Bac	k to table	e of co	ntents	







ERROR:

Caused by paper mismatch.

s s	ecure Print 👩 Scan			Menu	C Energy Saver	hamishfri 🏳 Log O	ell ut
The appropriate paper size, A5, is no start printing.	ot available. Select another p	aper size, then press	[OK] to		Settings/ Registration	= +	ome
 Paper Required for Print A5 	* ,	E A4			1	2 АВС	3 DEF
	3		1 A4	D	4 бні	5 JKL	6 мno
			2 A3		7 PQRS	8 тиv	9 wxyz
			3 A4R		*	0	#
Details of Selected Paper			▲ A3 目		С	🥢 R	eset
 A4 Plain 2 (76-90 g/m2) 					Sta	t	Stop
Cancel	Close	L.	OK		¢	>	
🐵 Status Monitor 🛛 🔒 🗇 Printer	1 A5	Load paper.		ŷ			123
			<u>Back</u>	to table	<u>e of co</u>	<u>ntents</u>	->





ERROR:

Error has occurred message.







ERROR:

Wrong paper size.

Status Monitor	ure Print 😥 Scan	Menu	C Energy Saver	hamishfri G+ Log O	ell ut
Job No. : 5061 Status : Error			Settings/ Registration	۳ ۱	ome
Received TimeDepartment ID	 ► 03/11 2021 14:55 ► 		1	2 АВС	3 Def
Job TypeFile Name	 Printer Microsoft Word - HANDOVER 2021 C 		4 бні	5 JKL	6 мno
 User Name Received Size 	► HamishFriell		7 PQRS	8 TUV	9 wxyz
Rasterized Pages	► [] 9		*	0	#
 Sneets Print Time 	 Less than 1 min. 		С	🥢 R	eset
Waiting Time	Less than 1 min.		Stal	rt	Stop
Pause Paper Feed	Skip Error OK	J	¢	>	
Status Monitor 🗟 🝣 Printer	Check the Status Monitor screen.	Ð			123









Select the "Cancel" button to remove the document that caused the error.

Status Monit	tor	Secure Print	Scan			Menu	C Energy Saver	hamishfri T + Log C	ell Dut
Copy/Print	Send	Receiv	re	Store	Consumables/ Others		Settings/ Registration	H 🗈	lome
Job Status	s and a second se	Job Log		I	Print	•	1	2 авс	3 DEF
Time 14:55	Job Name	User Na Word - HA Hamish	ame Sta I <mark>Friell Errc</mark>	tus o <mark>r</mark>	App. Wait Time <mark>< 1 min.</mark>		4 _{GHI}	5 JKL	6 мNO
							7 PQRS	8 тиv	9 wxyz
							*	0	#
							с	// R	eset
Interrupt/ Priority Print	Details	Cancel					Stal	rt	Stop
					Close	لد	Û	>	
Status Monitor	🗄 🧇 Prir	iter	1 A5	Load paper.		0D			123
					<u>Back</u>	to tabl	<u>e of co</u>	<u>ntents</u>	





Select the "Setting/Registration" button to start auto gradation.







Select "Adjustment/Maintenance".







Select the "Adjust Image Quality" option.







Select the "Auto Adjust Gradation" option.









(2)

Select the "Full Adjust" button.

Select the "OK" button.

Settings/ Registration	Secure Print Scan	Menu	C Energy Saver	hamishfr 🏳 Log (iell Dut
<auto adjust="" grada<br="">Select the type for a</auto>	ation> adjustment.		Settings/ Registration		lome
Plain/Heavy 1	Heavy 2-7		1	2 АВС	3 DEF
			4 _{GHI}	5 JKL	6 мно
			7 PQRS	8 TUV	9 wxyz
Full Adju	ust Quick Adjust	Adjustment Level	*	0	#
		Initialize When Using Full Adjust	С	// F	Reset
			Sta	rt	Stop
		ОК Д	Î	>	
Status Monitor	🗄 🔼 An original has been left on the plate	n glass. ල්ට			123
		<u>Back to tab</u>	<u>le of cc</u>	ontents	







Select "A4 paper" option.



Settings/ Registration hamishfriell C (\mathfrak{X}) Secure Print 🛃 Scan Energy Saver 🕞 Log Out Settings/ Registration <Select Paper> 亩 Home Select the drawer that contains the paper type to adjust. Allowed paper: A3, A4, 11x17, and LTR; Plain and Heavy 1 1 2 3 ∎ A4 ≣ D ABC DEF 5 4 6 A4 GHI JKL MNO E 2 A3 7 8 9 Ē PQRS τυν WXYZ 3 A4R × # 0 **4** A3 ≣ С 🥢 Reset Details of Selected Paper 🕨 🗍 A4 **?** Plain 2 (76-90 g/m2) Stop 2 \Diamond \bigcirc X OK Cancel ුව Status Monitor 🚯 🔼 An original has been left on the platen glass. 123











Select "Start Printing".

Setti Regi	ngs/ stration Secure Print Scan	Menu	C Energy Saver	hamishfri ₽ Log C	iell Dut
<auto< td=""><td>Adjust Gradation></td><td></td><td>Ettings/</td><td>۰ 🗈</td><td>lome</td></auto<>	Adjust Gradation>		Ettings/	۰ 🗈	lome
2616	<full adjust=""> Print Test Page 1 for Auto Adjust Gradation.</full>		Registration		
Pla			1	2 авс	3 Def
			4 бні	5 JKL	6 мпо
	Start Printing		7 PQRS	8 тиv	9 wxyz
			*	0	#
	(Check that there are 4 sheets of paper or more in the specified paper drawer.)		С	// R	leset
	× Cancel		Star	t	Stop
		J	¢	>	
Status	Monitor 🔒 🔼 An original has been left on the platen glass.	ිට			123
(Back	to tab	le of co	ontent	s 📥





Continuation from "Start Scanning".



Place print on "platen Glass".

Settings/ Registration Enclosion	C Energy Saver	hamishfr ₽ Log (iell Out
Sele Sele Scan the printed Test Page 1.	Settings/ Registration		Home
	1 4	2 _{АВС} 5	3 Def 6 MNO
Test Page Start Scanning	7 PQRS	8 TUV	9 wxyz
(Place the test page face down on the platen glass. Make sure the black bar is at the left edge of the glass.)	* c	0	# Reset
× Cancel	Sta ¢	t >	Stop
🗞 Status Monitor 🖻 🔼 An original has been left on the platen glass.			123
Back to tab	le of cc	ontents	





Continuation from "Start Scanning".



Print second test page.

Υ.

Settings/ Registration Scan	Energy Saver	hamishf ₽ Log	riell Out Home
Print Test Page 2 for Auto Adjust Gradation.	1	2	3
	4 бні	льс 5 JKL	6 мNO
Start Printing	7 PQRS	8 TUV	9 wxyz
	*	0	#
(Remove the scanned test page from the platen glass.)	С	11	Reset
× Cancel	Sta	rt >	Stop
🗞 Status Monitor 🚯 🔼 An original has been left on the platen glass.			123
Back to ta	ble of c	onter	<u>nts</u>





Continuation from "Start Scanning".



Place print 2 on Platen Glass.

Υ.

(★) ^S ^R	ettings/ Registration	Secure Print	Scan			Menu	C Energy Saver	hamishfrie ∏⇒ Log O	ell ut
<au Sele</au 	to Adiust Gradation> <full adjust=""></full>	t Dago 3					Settings/ Registration	: H	ome
Pla	scan the printed res	a rage 2.					1	2 авс	3 Def
				4 GHI	5 JKL	6 мно			
	Test Page		Start Scanning		7 PQRS	8 тиv	9 wxyz		
						*	0	#	
	(Place the test page	(Place the test page face down on the platen glass. Make sure the black bar is at the top edge of the glass.)]	С	🥢 R	eset
	× Cancel					Sta	rt	Stop	
					UN			>	
Stat	tus Monitor 🛛 🗟 🛞 Set	tings/Registration	Waiting to a	scan		Ô			123
(<u>Back</u>	to tabl	e of cc	ontents	





Continuation from "Start Scanning".



Print the third test page.

×

Settings/ Registration	C Energy Saver	hamishfrie ⊪ Log O	ell ut
<auto adiust="" gradation=""> Sele <full adjust=""> Driet Test Dans 2 for Auto Adjust Cradation</full></auto>	Settings/ Registration	: H	ome
Pla	1	2 авс	3 Def
	4 _{GHI}	5 JKL	6 мно
Start Printing	7 PQRS	8 TUV	9 wxyz
	*	0	#
(Remove the scanned test page from the platen glass.)	С	🥢 Re	eset
× Cancel	Sta	rt	Stop
	¢	>	\bigcirc
Status Monitor 🗟 🛞 Settings/Registration Waiting to print			123
Back to tab	le of cc	ontents	





Continuation from "Start Scanning".



Place print 3 on Platen Glass.

Setti Regi	hgs/ stration Secure Print Scan	C Energy Saver	hamishfr 🕞 Log (iell Out
<auto Sele</auto 	Adiust Gradation> <full adjust=""> Scan the printed Test Page 3.</full>	Settings/ Registration		Home
Pla		1 4 _{GHI} 7	2 _{АВС} 5 ЈКЦ 8	3 _{DEF} 6 мNO 9
	Test Page Start Scanning (Place the test page face down on the platen glass. Make sure the black bar is at the top edge of the glass.)	PQRS * C	τυν Ο	wxyz # Reset
	X Cancel	Star	t >	Stop
Status /	Monitor 🕅 (*) Settings/Registration Waiting to scan	e of cc	ontent	<u>123</u>





Continuation from "Start Scanning".



Print the fourth test page.

Settings/ Registration	C Energy Saver	hamishfri I Dg O	ell Put
<auto adiust="" gradation=""> Sele <full adjust=""> Print Test Page 4 for Auto Adjust Gradation.</full></auto>	Settings/ Registration	: +	ome
	1 4	2 ABC 5	3 DEF 6
Start Printing	7 PQRS	яс 8 тич	9 wxyz
(Remove the scanned test page from the platen glass.)	* C	0 1/ R	# eset
× Cancel	Sta	rt >	Stop 🞯
🗞 Status Monitor 🚯 🔼 An original has been left on the platen glass.			123
Back to tab	ole of c	ontent	<u>s</u>





Continuation from "Start Scanning".



Place print 4 on Platen Glass.

 	egistration Secure Print Scan	C Energy Saver	hamishfri ⊪ Log C	ell Dut
<au Sele</au 	to Adjust Gradation> Full Adjust> 	Settings/ Registration		ome
Pla	Scan the printed lest Page 4.	1	2 авс	3 Def
		4 _{GHI}	5 JKL	6 мNO
	Test Page Start Scanning	7 PQRS	8 тиv	9 wxyz
		*	0	#
	(Place the test page face down on the platen glass. Make sure the black bar is at the top edge of the glass.)	С	// R	eset
	× Cancel	Sta C	rt >	Stop 🗑
🔷 Stat	us Monitor 🗟 🔼 An original has been left on the platen glass.			123



